

SE-37, SE-57, SE-67 Backlight Display

1. Press the **Functions** Key.
2. Press the **More** soft Key.
3. Press the **Setup** soft key.
4. Press the **Super** soft key.
5. Press the **More** soft key.
6. Press the **Light** soft key.
7. Press the **CLR** key and it will turn the backlight on.
8. Press the **CLR** key again to return to the main screen.