

## SE-37, SE-57, SE-67 Enabling Autose

1. Press the **Functions** Key
2. Press the **More** soft key
3. Press the **Auset** soft key
4. Press **Yes** to enable the Autose feature.