





SE-37, SE-57, SE-67 & WJS5, WJS10 Rate Module Installation

1	Turn the scale's power switch, located on the rear of the scale, to the "OFF" position. Note: If the Rate Module is removed from or installed in the scale with the power "ON", severe damage may occur to the scale.	
2	Remove the scale platter.	
3	Remove the rate module cover from the top of the scale.	
4	Remove the Rate module from the scale.	
5	Install the new Rate Module.	
6	Replace the Rate Module cover and scale platter.	
7	Turn the scale's power switch to the "ON" position.	
8	Process a transaction to verify operation of the new Rate Module. Return the old Rate Module in the prepaid padded envelope.	