

## SE-37, SE-57, SE-67 Configuring Rates

1. Press the **Functions** Key.
2. Press the **More** soft Key
3. Press the **Setup** soft key
4. Press the **Super** soft key
5. Press the **More** soft key
6. Press the **Rates** Soft key
7. Use the Up and Down arrow to select the desired rate.
8. Press a number (1 – 6 ) to select the order you wish the rate to be displayed in the OTHER RATES menu
9. Press the **Save** soft key
10. Press the **CLR** key